


INSTALLATION OF STRIPPER ON BUKH SAILDRIVE

To fit the Stripper first remove the propeller cone nut and slide the propeller and distance piece from the shaft. Remove the old anode and replace with the new one.


The Stripper is an exact replacement for the distance piece that was fitted originally.

Modify the propeller as shown and refit by sliding along the shaft. The driving screws in the cutter will engage in the holes in the front face of the propeller.

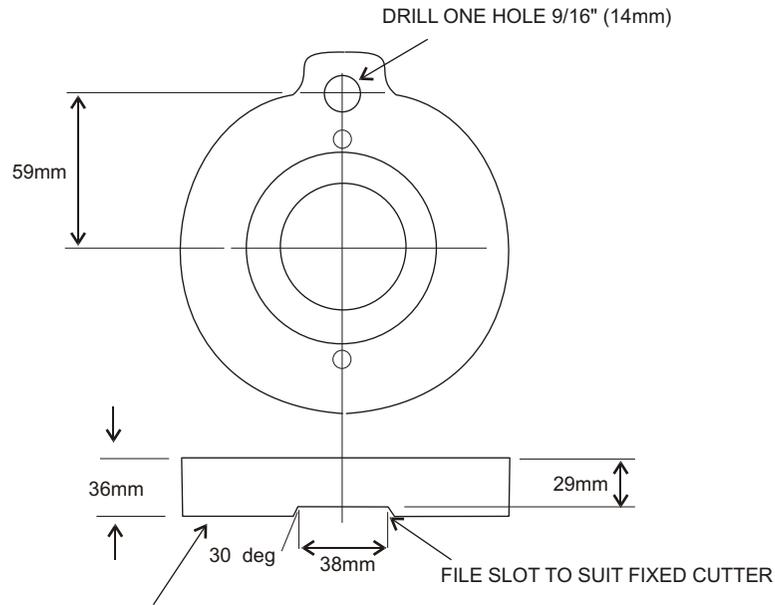

THE ANODE IS 40mm THICK AS STANDARD M/C 4mm OFF THIS FACE. ALSO BORE OUT 88mm BY 14mm DEEP

ANODE MODIFICATIONS

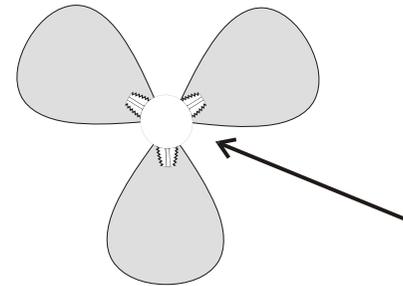

BEWARE OF SHARP EDGES !

PROPELLER MODIFICATIONS

THE PROPELLER NEEDS TWO HOLES 3/8" (9mm) TO MATCH THE DRIVING SCREWS IN THE CUTTER DRILL THESE 6mm DEEP. TO DRAWING OPPOSITE

SOME PROPELLERS MAY HAVE A PROTRUDING LIP ON THEIR FORWARD SIDE WHICH SHOULD BE FILED AWAY FLUSH.

